


installation operation and service instructions

G17 Series Units

GAS UNITS
502,775M
9/92
Supersedes 502,686M

RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

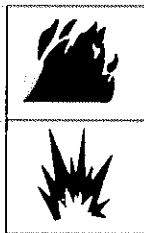

⚠ WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.


Installation and service must be performed by a qualified installer, service agency or the gas supplier.

WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
- Extinguish any open flames.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

TABLE OF CONTENTS

| | |
|--|---------|
| Unit Dimensions | Page 1 |
| Start-Up and Performance Check List | Page 1 |
| Requirements | Page 2 |
| General | Page 3 |
| Combustion, Dilution and Ventilation Air | Page 3 |
| Installation | Page 5 |
| Gas Piping | Page 7 |
| Electrical | Page 9 |
| Start-Up and Adjustments | Page 12 |
| Service | Page 15 |
| Repair Parts | Page 17 |
| Parts Identification | Page 18 |
| Troubleshooting | Page 19 |

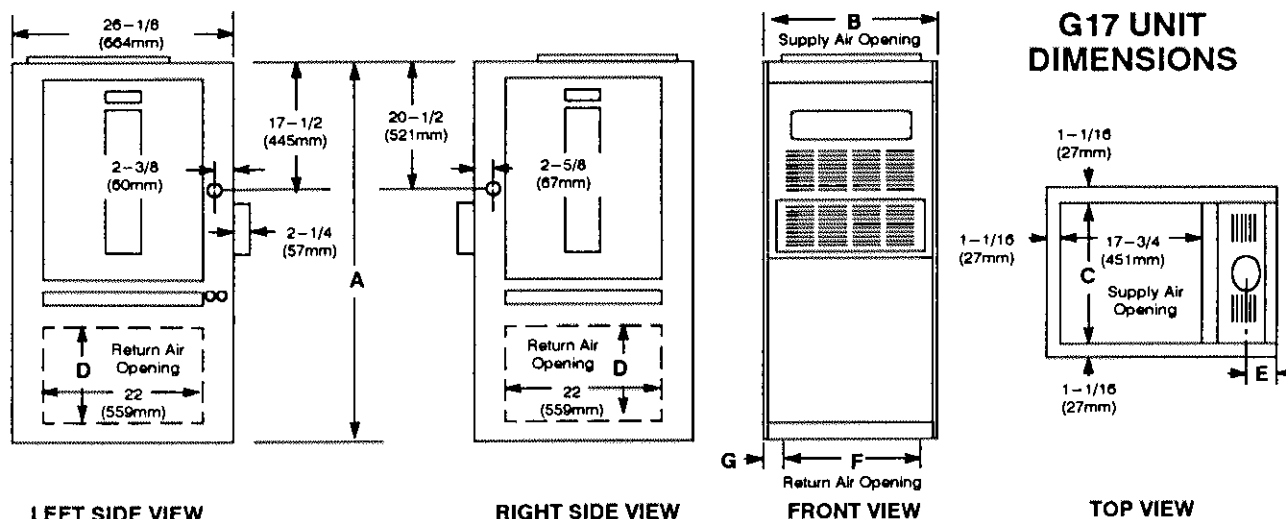

| Model No. | A | B | C | D | E | F | G |
|----------------------------------|--------------------|-----------------------|-----------------------|-------------------|---------------------|-------------------|---------------------|
| G17Q2(X)-50 G17Q3(X)-75 | 49 in. (1245mm) | 16-1/4 in. (413mm) | 14-1/8 in. (359mm) | 14 in. (356mm) | 3-1/8 in. (79mm) | 11 in. (279mm) | 2-5/8 in. (67mm) |
| G17Q4X-75 G17Q3/4(X)-100 | 49 in. (1245mm) | 21-1/4 in. (540mm) | 19-1/8 in. (486mm) | 14 in. (356mm) | 3-1/8 in. (79mm) | 14 in. (356mm) | 3-5/8 in. (92mm) |
| G17Q5/6(X)-100 G17Q5/6(X)-125 | 53 in. (1346mm) | 26-1/4 in. (667mm) | 24-1/8 in. (613mm) | 18 in. (457mm) | 3-3/8 in. (86mm) | 21 in. (533mm) | 2-5/8 in. (67mm) |

START-UP AND PERFORMANCE CHECK LIST

Job Name _____ Job No. _____ Date _____
 Job Location _____ City _____ State _____
 Installer _____ City _____ State _____
 Unit Model No. _____ Serial No. _____ Serviceman _____

HEATING SECTION

| | |
|--|---|
| Electrical Connections Tight? <input type="checkbox"/> Supply Voltage _____ Blower Motor Amps _____ Blower Motor H.P. _____ Blower Motor Lubrication O.K.? <input type="checkbox"/> Gas Piping Connections Tight & Leak-Tested? <input type="checkbox"/> Fuel Type: Natural Gas? <input type="checkbox"/> LP/Propane Gas? <input type="checkbox"/> Furnace Btu Input _____ Line Pressure _____ Regulator Pressure _____ w.c. — Nat.: _____ w.c. — LP/Propane | Air Shutters Properly Adjusted (If Installed)? <input type="checkbox"/> Flue Connections Tight? <input type="checkbox"/> Proper Draft? <input type="checkbox"/> Fan Control Setting (45 Seconds Fixed On) _____ Fan Control Off Setting _____ Temperature Rise _____ Filter Clean & Secure? <input type="checkbox"/> Vent Clear? <input type="checkbox"/> |
|--|---|

THERMOSTAT

Calibrated? Heat Anticipator Properly Set? Level?

I—REQUIREMENTS

Installation of Lennox gas central furnaces must conform with local building codes or, in the absence of local codes, with the current National Fuel Gas Code (ANSI—Z223.1). The National Fuel Gas Code is available from:

American National Standards Institute, Inc.
1430 Broadway
New York, NY 10018

These units are A.G.A. (American Gas Association) certified.

NOTE—G17X series units (units equipped with flame rods) are certified for use with natural gas only.

Air supply for combustion and ventilation must conform to the methods outlined in the current National Fuel Gas Code.

▲ WARNING

Product contains fiberglass wool.

Disturbing the insulation in this product during installation, maintenance, or repair will expose you to fiberglass wool. Breathing this may cause lung cancer. (Fiberglass wool is known to the State of California to cause cancer.)

Fiberglass wool may also cause respiratory, skin, and eye irritation.

To reduce exposure to this substance or for further information, consult material safety data sheets available from address shown below, or contact your supervisor.

**Lennox Industries Inc.
P.O. Box 799900
Dallas, TX 75379—9900**

The furnace is certified for installation clearances to combustible material as listed on the appliance rating plate and in table 1:

TABLE 1

| Clearances | Location | Inches (mm) |
|--------------------------------|--------------------|----------------|
| Service access | Front | 36 in. (914mm) |
| To combustible materials | Top, side and rear | 1 in. (25mm) |
| | Flue | 6 in. (152mm)* |
| From Draft Hood Relief Opening | Front | 6 in. (152mm) |

*NOTE—Service access clearance must be maintained. * 1" (25mm) for type "B1" Vent Pipe.*

Accessibility and service clearances must take precedence over fire protection clearances.

Vent installations shall be in accordance with the GAMA venting tables booklet supplied with this unit and applicable provisions of local building codes.

NOTE—For installation on combustible floors, appliance shall not be installed directly on carpeting, tile, or other combustible material other than wood flooring.

For installation in a residential garage, unit must be installed so that burner(s) and ignition source are located no less than 18 in. (457 mm) above floor. Furnace must be located or protected to avoid physical damage by vehicles.

Unit must be adjusted to obtain a temperature rise within the range specified on appliance rating plate.

The draft hood shall be installed in the same atmospheric pressure zone as the combustion air inlet to the furnace. G17 unit must be installed so that electrical components are protected from water.

When furnace is used in conjunction with cooling units, it shall be installed in parallel with, or on the upstream side of, cooling units to avoid condensation in the heating element. With a parallel flow arrangement, damper (or other means to control the flow of air) shall be adequate to prevent chilled air from entering the furnace and, if manually operated, must be equipped with means to prevent operation of either unit, unless damper is in the full "heat" or "cool" position.

When installed, furnace must be electrically grounded in accordance with local codes or, in the absence of local codes, with the current National Electric Code, ANSI/NFPA No. 70. The National Electric Code (ANSI/NFPA No. 70) is available from:

National Fire Protection Association
470 Atlantic Avenue
Boston, MA 02210

Field wiring connection with unit must meet or exceed specifications of type T wire and withstand a 63°F (17°C) temperature rise. When furnace is installed so that supply ducts carry air circulated by furnace to areas outside space containing furnace, return air shall be handled by a duct(s) sealed to the furnace casing and terminating outside space containing furnace.

G17 units are Canadian Gas Association (C.G.A.) certified. This furnace is certified for installation clearances to combustible material as listed on appliance rating plate and in table 1. Accessibility and service clearances must take precedence over fire protection clearances.

Installation of C.G.A. certified units must conform with current Standard CAN/CGA—B149.1 "Installation Code for Natural Gas Burning Appliances and Equipment" and CAN/CGA—B149.2 "Installation Code for Propane Gas Burning Appliances and Equipment," local plumbing or waste water codes and other applicable local codes. Authorities having jurisdiction should be con-

sulted before installation. Adequate clearance shall be made around air openings into the vestibule area. Provisions shall be made for proper operation and for combustion air and ventilation air supply according to the current CAN/CGA–B149 standards.

All electrical wiring and grounding for the unit must be in accordance with the current regulations of the Canadian Electrical Code Part I (C.S.A. Standard C22.1) and/or local codes.

II–GENERAL

These instructions are intended as a general guide and do not supersede local codes in any way. Authorities having jurisdiction should be consulted before installation.

A–Shipping and Packing List

- 1–Leveling bolt package (if ordered)
- 1–Thermostat (if ordered)
- 1–Rubber grommet (for electrical make–up)

B–Shipping Damage

Check unit for shipping damage. Receiving party should contact last carrier immediately if any shipping damage is found.

III–COMBUSTION, DILUTION & VENTILATION AIR

Until recently, there was no problem in bringing in sufficient amounts of outdoor air for combustion – – infiltration provided all the air that was needed and then some. In today's homes built with energy conservation in mind, tight construction practices make it necessary to bring in air from outside for combustion. Consideration must also be given to the use of exhaust fans, appliance vents, chimneys and fireplaces because they force additional air that could be used for combustion out of the house. Unless outside air is brought into the home for combustion, negative pressure (pressure outside is greater than inside pressure) will build to the point that a down draft can occur in the furnace vent pipe or chimney. Combustion gases enter the living space creating a potentially dangerous situation.

In the absence of local codes concerning air for combustion and ventilation, this section outlines guidelines and recommends procedures for installing G17 furnaces in a manner that ensures efficient and safe operation. Special consideration must be given to combustion air needs as well as requirements for exhaust vents and gas piping. A portion of this information has been reprinted with permission from the National Fuel Gas

Code (ANSI–Z223.1). This reprinted material is not the complete and official position of the ANSI on the referenced subject, which is represented only by the standard in its entirety.

In Canada, refer to the standard CAN/CGA–B149.1 and –B149.2 installation codes.

Combustion Air Requirements

CAUTION

Insufficient combustion air can cause headaches, nausea, dizziness or asphyxiation.

All gas–fired appliances require air to be used for the combustion process. If sufficient amounts of combustion air are not available, the furnace or other appliance will operate in an inefficient and unsafe manner. Enough air must be provided to meet the needs of all fuel–burning appliances, as well as appliances such as exhaust fans which force air out of the home. When fireplaces, exhaust fans, or clothes dryers are used at the same time as the furnace, much more air is required to ensure proper combustion and to prevent a down–draft situation. Insufficient amounts of air also cause incomplete combustion which can result in carbon monoxide. The requirements for providing air for combustion and ventilation depend largely on whether the furnace is installed in an unconfined or confined space.

Unconfined Space

An unconfined space is an area such as a basement or large equipment room with a volume greater than 50 cubic feet per 1,000 Btu per hour of the combined input rating of all appliances installed in that space. This space also includes adjacent rooms which are not separated by a door. Though an area may appear to be unconfined, it might be necessary to bring in outdoor air for combustion if the structure does not provide enough air by infiltration. If the furnace is located in a building of tight construction with weather stripping and caulking around the windows and doors, follow the procedures outlined for using air from the outside for combustion and ventilation.

Confined Space

A confined space is an area with volume less than 50 cubic feet per 1,000 Btu per hour of the combined input rating of all appliances installed in that space. This definition includes furnace closets or small equipment rooms.

When the furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air must be handled by ducts which are sealed to the furnace casing and which terminate outside the space containing the furnace. This is especially important when the furnace is mounted on a platform in a confined space such as a closet or small equipment room. Even a small leak around the base of the unit at the platform or at the return air duct connection can cause a potentially dangerous negative pressure condition. Air for combustion and ventilation can be brought into the confined space either from inside the building or from outside.

Air from Inside

If the confined space housing the furnace adjoins space categorized as unconfined, air can be brought in by providing two permanent openings between the two spaces. Each opening must have a minimum free area of 1 square inch per 1,000 Btu per hour of the total input rating of all gas-fired equipment in the confined space. Each opening must be at least 100 square inches. One opening shall be within 12 inches of the top of the enclosure and one opening within 12 inches of the bottom (See figure 1).

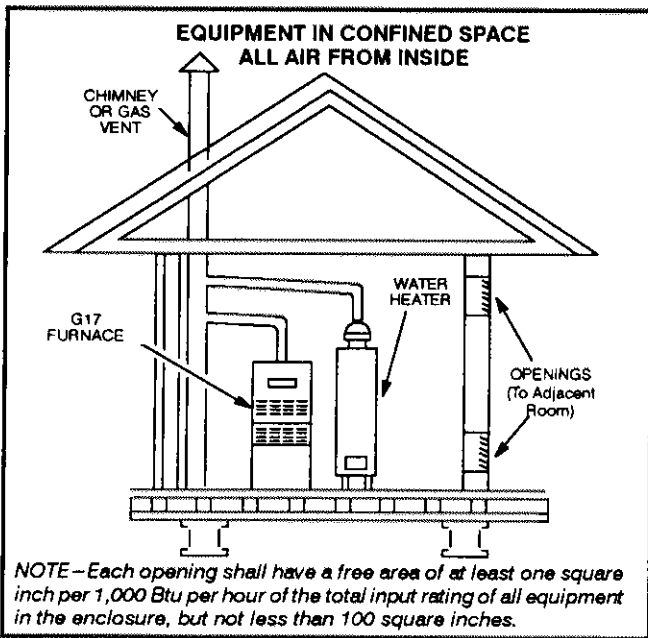


FIGURE 1

Air from Outside

If air from outside is brought in for combustion and ventilation, the confined space shall be provided with two permanent openings. One opening shall be within 12 inches of the top of the enclosure and one within 12 inches

of the bottom. These openings must communicate directly or by ducts with the outdoors or spaces (crawl or attic) that freely communicate with the outdoors or indirectly through vertical ducts. Each opening shall have a minimum free area of 1 square inch per 4,000 Btu per hour of total input rating of all equipment in the enclosure (See figures 2 and 3). When communicating with the outdoors through horizontal ducts, each opening shall have a minimum free area of 1 square inch per 2,000 Btu per total input rating of all equipment in the enclosure (See figure 4).

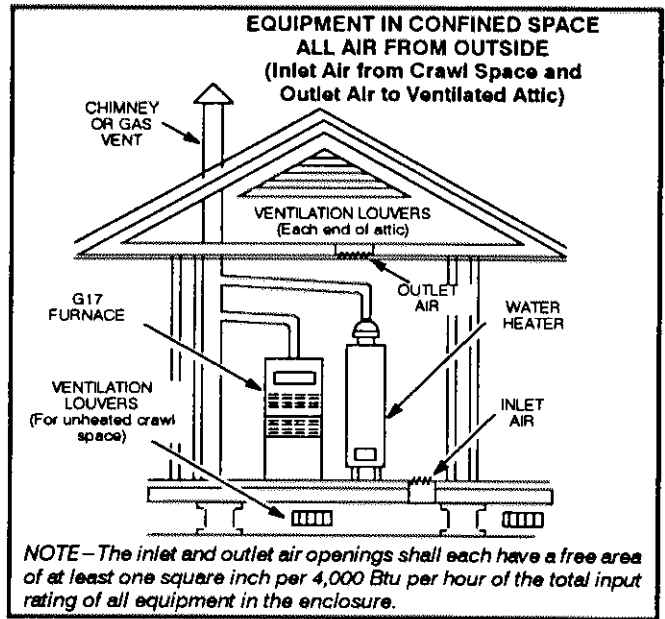


FIGURE 2

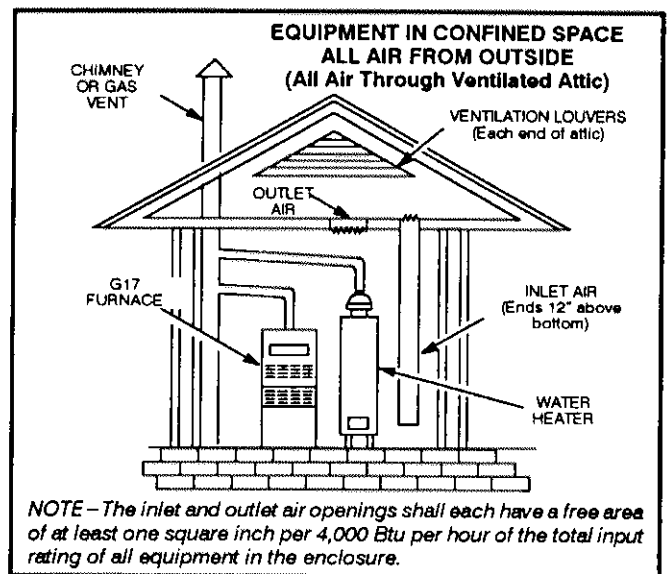


FIGURE 3

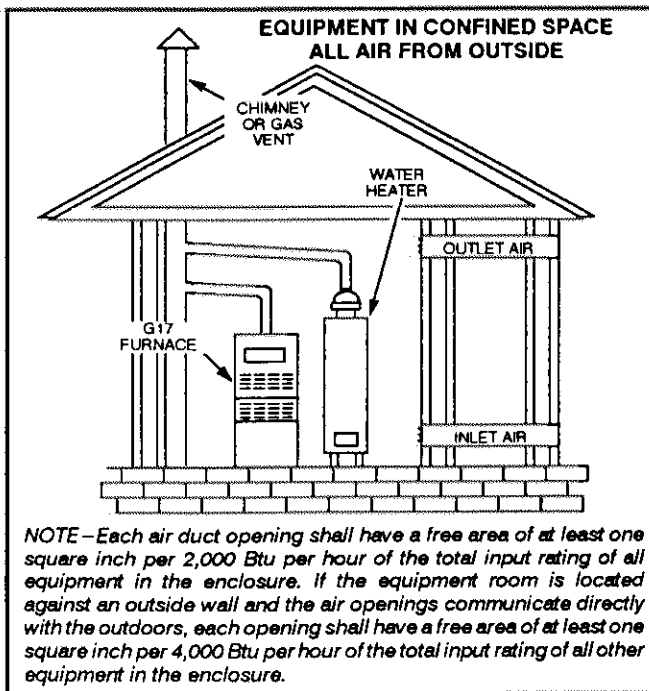


FIGURE 4

When ducts are used, they shall be of the same cross-sectional area as the free area of the openings to which they connect. The minimum dimension of rectangular air ducts shall be no less than 3 inches. In calculating free area, the blocking effect of louvers, grilles, or screens must be considered. If the design and free area of protective covering is not known for calculating the size opening required, it may be assumed that wood louvers will have 20 to 25 percent free area and metal louvers and grilles will have 60 to 75 percent free area. Louvers and grilles must be fixed in the open position or interlocked with the equipment so that they are opened automatically during equipment operation.

IV—INSTALLATION

A—Setting Equipment

- 1— Holes are provided in the corners of unit base for leveling unit. Install leveling bolts (if desired) or shim under unit. See figure 5.

NOTE—If leveling bolts are used, be sure to install the plastic nuts and tighten snugly before setting the unit.

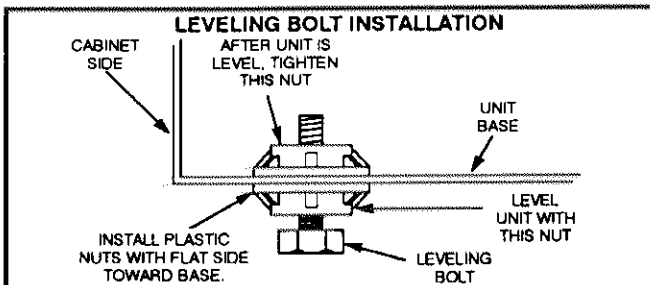


FIGURE 5

- 2— Set unit in desired location allowing for clearances listed on appliance rating plate. Also allow for gas supply connection, electrical supply, vent connections and installation and service clearances.

B—Return Air Opening

⚠ WARNING

Improper installation of unit can result in personal injury or death. Combustion and flue products must never be allowed to enter the return air system or air in the living space. Use sheet metal screws and joint tape to seal return air system to furnace.

In platform installations with furnace return, the furnace should be sealed airtight to the return air plenum. A door must never be used as a portion of the return air duct system. The base must provide a stable support and an airtight seal to the furnace. Allow absolutely no sagging, cracks, gaps, etc.

For no reason should return and supply air duct systems ever be connected to or from other heating devices such as a fireplace or stove, etc. Fire, explosion, carbon monoxide poisoning, personal injury and/or property damage could result.

⚠ WARNING

Blower door must be securely in place when blower and burners are operating. Gas fumes, which could contain carbon monoxide, can be drawn into living space resulting in personal injury or death.

If cold air return is to terminate through the floor under the furnace, a direct, airtight and sealed connection must be made to the bottom of the furnace. For installations where the return air is taken from a return air drop, unit may be installed using either the left or right side of furnace.

For side return air applications, cut furnace cabinet at sized knockout squares for maximum return air.

Return air can be brought in either side or at the bottom of the unit. Scribe lines show the outline of each side return air opening.

C—Duct System

Size and install supply and return air duct system using industry-approved standards that result in a quiet and low-static system with uniform air distribution.

Supply Air Duct System

C.G.A. certified units require a removable access panel in the supply air duct. The access panel should be large enough to permit inspection of heat exchanger for leaks after installation (either by smoke or reflected light). Access panel must not allow leaks in the supply air duct system.

Return Air Duct System

After return air duct system location is determined, move the filter retention springs to the correct position and crimp the rear of the spring to hold it in place for filter servicing. Refer to figure 24. Seal between return air duct or plenum and furnace so that there is no leakage.

Bottom Return Air Installation

In all bottom return air applications, the material directly beneath the bottom return opening must be non-combustible. Unit may be installed on a combustible floor.

⚠ WARNING

Danger of fire and recirculation of combustion fumes.

Injury and or property damage can result. G17X units are factory provided for bottom return air installation only. For side return air installation, kit LB-83619 must be used.

NOTE—G17 and G17X—Q5/6—100, —125 units with bottom return air require a bottom return filter (LB-62752DA) which is available as an accessory. The G17Q5/6X—100 comes standard with a bottom return air filter. For side return air, use provided filter and cut to size: 20" x 25".

NOTE—Return air duct must be secured to the unit using rivets or S-locks. Using screws to secure the return air duct to the unit will interfere with the filter and cause improper filtration.

D—Venting

G17 furnaces must be vented in compliance with all local codes, the GAMA venting tables booklet included with this unit in the U.S.A. and the current standards of CAN/CGA—B149.1 and —B149.2 in Canada and these instructions.

The G17 or G17X gas furnace must not be connected to a chimney serving a separate appliance designed to burn solid fuel.

A 9" minimum length vent connector must be run from the furnace flue outlet to the first 90° elbow. See figure 6.

Venting Using a Masonry Chimney

Any masonry chimney used for venting a G17 or G17X gas furnace must be lined, and must be sized and installed per all applicable local building codes or, in the absence of local codes, the current National Fuel Gas Code (ANSI—Z223.1) in the U.S.A. and the current standards of CAN/CGA—B149.1 and —B149.2 in Canada. The effective area of the chimney serving a single appliance must be no less than the effective area of the draft hood outlet. The chimney must extend vertically at least 5 feet above the flue collar.

Masonry chimneys serving fireplaces cannot be used for venting purposes unless the fireplace opening is permanently sealed. See figure 6.

When inspection reveals that an existing chimney is not safe for the intended purpose, it shall be rebuilt to conform to nationally recognized standards, lined or relined with suitable materials or replaced with a gas vent or chimney suitable for venting G17 series units. The chimney passageway must be checked periodically to ensure that it is clear and free of obstructions.

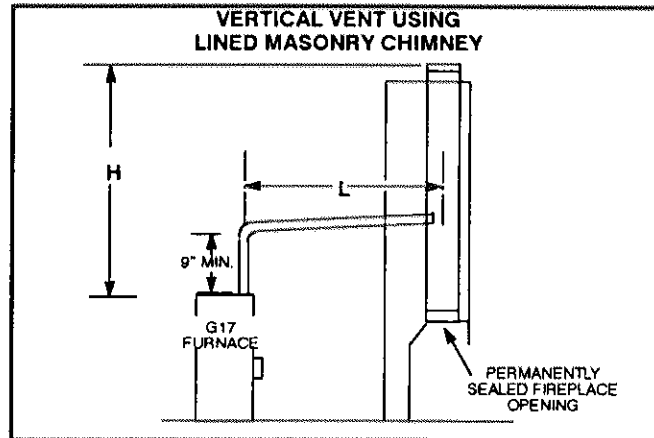


FIGURE 6

Removal of Unit from Common Venting System

In the event that an existing furnace is removed from a venting system commonly run with separate gas appliances, the venting system is likely to be too large to properly vent the remaining attached appliances. The following test should be conducted while each appliance in operation and the other appliances not in

operation remain connected to the common venting system. If the venting system has been installed improperly, the system must be corrected as outlined in the previous section.

- 1- Seal any unused openings in the common venting system.
- 2- Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
- 3- Insofar as is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliances not connected too the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
- 4- Follow the lighting instruction. Place the appliance being inspected in operation. Adjust thermostat so appliance will operate continuously.
- 5- Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar or pipe.
- 6- After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-burning appliance to their previous condition of use.
- 7- If improper venting is observed during any of the above tests, the common venting system must be corrected.

V-HORIZONTAL VENTING

This furnace is design certified by the American Gas Association for horizontal venting through an outside wall only with the use of a Field Controls Company Model #SWG-5L side wall venting kit available from Lennox Dealer Service Center. No other Field brand venting kit or any other manufacturer's venting kit is acceptable. Horizontal venting of this furnace without the use of the above stated kit is prohibited. See figure 7 for field wiring of side wall horizontal venting kit.

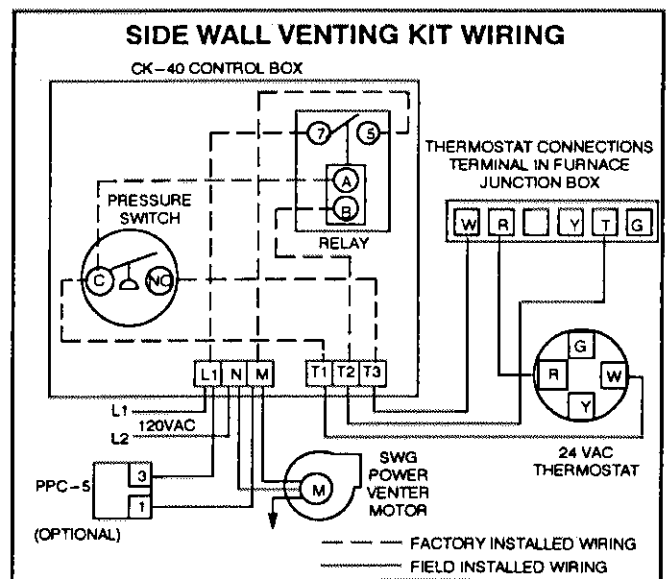


FIGURE 7

VI-GAS PIPING

Gas Supply

- 1- This unit is shipped standard for left side installation of gas piping. Simply connect gas supply to piping assembly.
- 2- A piping hole is also fabricated in the right side of the unit for alternate piping arrangements.
- 3- When connecting gas supply, factors such as length of run, number of fittings and furnace rating must be considered to avoid excessive pressure drop. Table 2 lists recommended pipe sizes for typical applications.
- 4- Gas piping must not run in or through air ducts, clothes chutes, chimneys or gas vents, dumb waiters or elevator shafts.
- 5- Piping should be sloped 1/4 inch per 15 feet upward toward the meter from the furnace. The piping must be supported at proper intervals (every 8 to 10 feet) using suitable hangers or straps. A drip leg should be installed in vertical pipe runs to the unit.
- 6- In some localities, codes may require installation of a manual main shut-off valve and union (furnished by installer) external to the unit. Union must be of the ground joint type.

▲ IMPORTANT

Compounds used on threaded joints of gas piping must be resistant to the actions of liquified petroleum gases.

TABLE 2

| Nominal Iron Pipe Size (Inches) | Internal Diameter (Inches) | Length of Pipe (Feet) | | | | | | | | | |
|---------------------------------|----------------------------|-----------------------|--------|--------|--------|-------|-------|-------|-------|-------|-------|
| | | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |
| 1/4 | .364 | 43 | 29 | 24 | 20 | 18 | 16 | 15 | 14 | 13 | 12 |
| 3/8 | .493 | 95 | 65 | 52 | 45 | 40 | 36 | 33 | 31 | 29 | 27 |
| 1/2 | .622 | 175 | 120 | 97 | 82 | 73 | 66 | 61 | 57 | 53 | 50 |
| 3/4 | .824 | 360 | 250 | 200 | 170 | 151 | 138 | 125 | 118 | 110 | 103 |
| 1 | 1.049 | 680 | 465 | 375 | 320 | 285 | 260 | 240 | 220 | 205 | 195 |
| 1-1/4 | 1.380 | 1,400 | 950 | 770 | 660 | 580 | 530 | 490 | 460 | 430 | 400 |
| 1-1/2 | 1.610 | 2,100 | 1,460 | 1,180 | 990 | 900 | 810 | 750 | 690 | 650 | 620 |
| 2 | 2.067 | 3,950 | 2,750 | 2,200 | 1,900 | 1,680 | 1,520 | 1,400 | 1,300 | 1,220 | 1,150 |
| 2-1/2 | 2.469 | 6,300 | 4,350 | 3,520 | 3,000 | 2,650 | 2,400 | 2,250 | 2,050 | 1,950 | 1,850 |
| 3 | 3.068 | 11,000 | 7,700 | 6,250 | 5,300 | 4,750 | 4,300 | 3,900 | 3,700 | 3,450 | 3,250 |
| 4 | 4.026 | 23,000 | 15,800 | 12,800 | 10,900 | 9,700 | 8,800 | 8,100 | 7,500 | 7,200 | 6,700 |

NOTE—Capacity given in cubic feet of gas per hour and based on 0.60 specific gravity gas.

NOTE—In the case emergency shutoff is required, shut off main manual gas valve and disconnect main power to unit. These devices should be properly labeled by the installer.

NOTE—Installer must provide a 1/8" N.P.T. plugged tap in the field piping upstream of the gas supply connection to the unit. Tap must be accessible for test gauge connection. See figure 8.

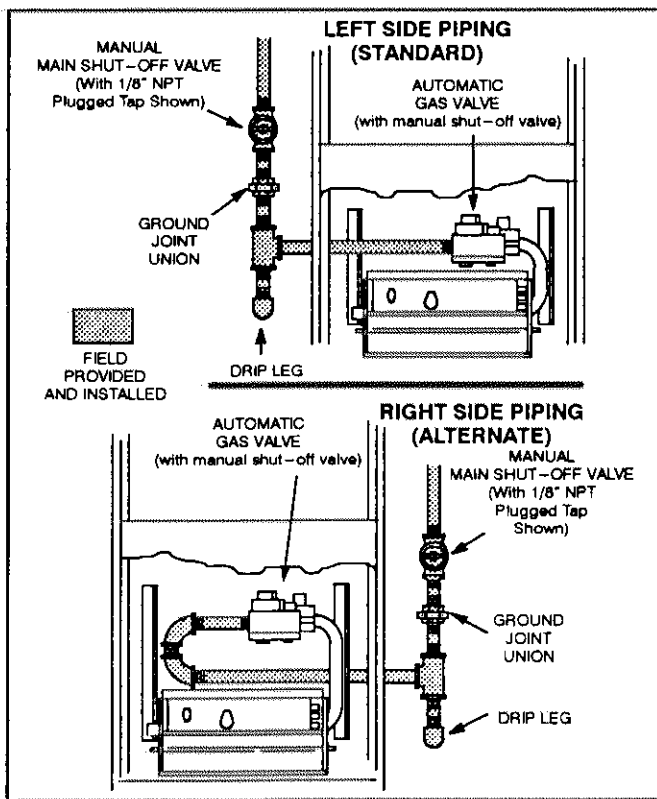


FIGURE 8

High Altitude Derate

A.G.A. certified units must be derated when installed at an elevation of 2,000 ft. (610 m) or more above sea level. If unit is installed at an altitude higher than 2,000 ft. (610 m), the unit must be derated 4% for each 1,000 ft. (305 m) above sea level.

C.G.A. certified units used in high altitude applications are equipped with modifications that eliminate the need for manifold pressure adjustment to obtain proper heat input. Check unit rating plate to make sure unit is a high altitude unit.

NOTE—This is the only permissible field derate for this appliance.

Leak Check

After gas piping is completed, carefully check all piping connections (factory and field) for gas leaks. Use a leak detecting solution or other preferred means.

⚠ CAUTION

Some soaps used for leak detection are corrosive to certain metals. Carefully rinse piping thoroughly after leak test has been completed. Do not use matches, candles, flame or other sources of ignition to check for gas leaks.

NOTE—In case emergency shutdown is required, shut down main manual gas valve and disconnect main power to unit. These devices should be properly labeled by the installer.

⚠ IMPORTANT

When testing pressure of gas lines, gas valve must be disconnected and isolated. See figure 9. Gas valves can be damaged if subjected to more than 1/2 psig (3.48 kPa).

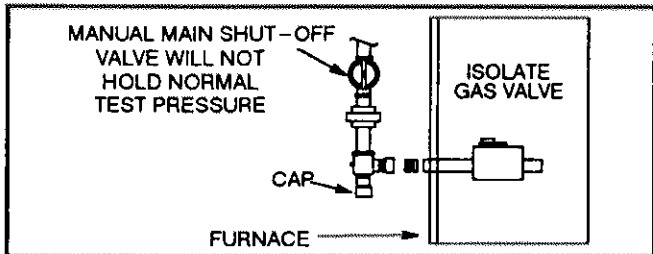


FIGURE 9

The furnace must be isolated from the gas supply system by closing its individual manual shut-off valve during any pressure testing of the gas supply system at pressures equal to or less than 1/2 psig (3.48 kPa).

⚠ IMPORTANT

G17X series units (units equipped with flame rods) are approved for use with natural gas only.

VII—ELECTRICAL

Refer to figure 10 for control box layout, figure 11 for point to point field wiring and figure 12 for schematic wiring diagram and troubleshooting.

- 1— Select fuse and wire size according to the blower motor amps.
- 2— Snaphole plugs are provided on both sides of cabinet to facilitate wiring.

- 3— Install room thermostat according to instructions provided with thermostat.
- 4— Install a separate fused disconnect switch near the unit so power can be turned off for servicing.
- 5— Before connecting thermostat wiring to unit, remove screws holding the hinged section of the control box. Swing the hinged section downward to ensure wires are proper length.
- 6— Complete wiring connections to equipment using wiring diagrams provided with unit and in figure 12. Use 18 gauge wire or larger for thermostat connections.
- 7— Electrically ground unit in accordance with local codes or, in the absence of local codes, in accordance with the current National Electric Code (ANSI/NFPA No. 70) and in Canada with the current Canadian Electric Code part 1 (CSA standard C22.1).

NOTE—Non-insulated ground wires must be wrapped in electrical tape to avoid damaging the BCC2 blower control center.

- 8— A 120 volt accessory terminal (ACC) is provided on the BCC2 blower control center. Any accessory rated up to 1 amp can be connected to this terminal and the neutral leg of the accessory can be attached to any free 120 volt neutral terminal on the BCC2 blower control center. The accessory terminal is energized whenever the blower is in operation. See figure 10. A troubleshooting flowchart for the BCC2 blower control is located in figure 31.
- 9— The continuous fan (CF) 120 volt terminal is used with an optional continuous low fan kit that is available from Lennox. The kit allows the furnace blower to run continuously on low speed. The kit cannot be used on units without a CF terminal on the BCC2 board.

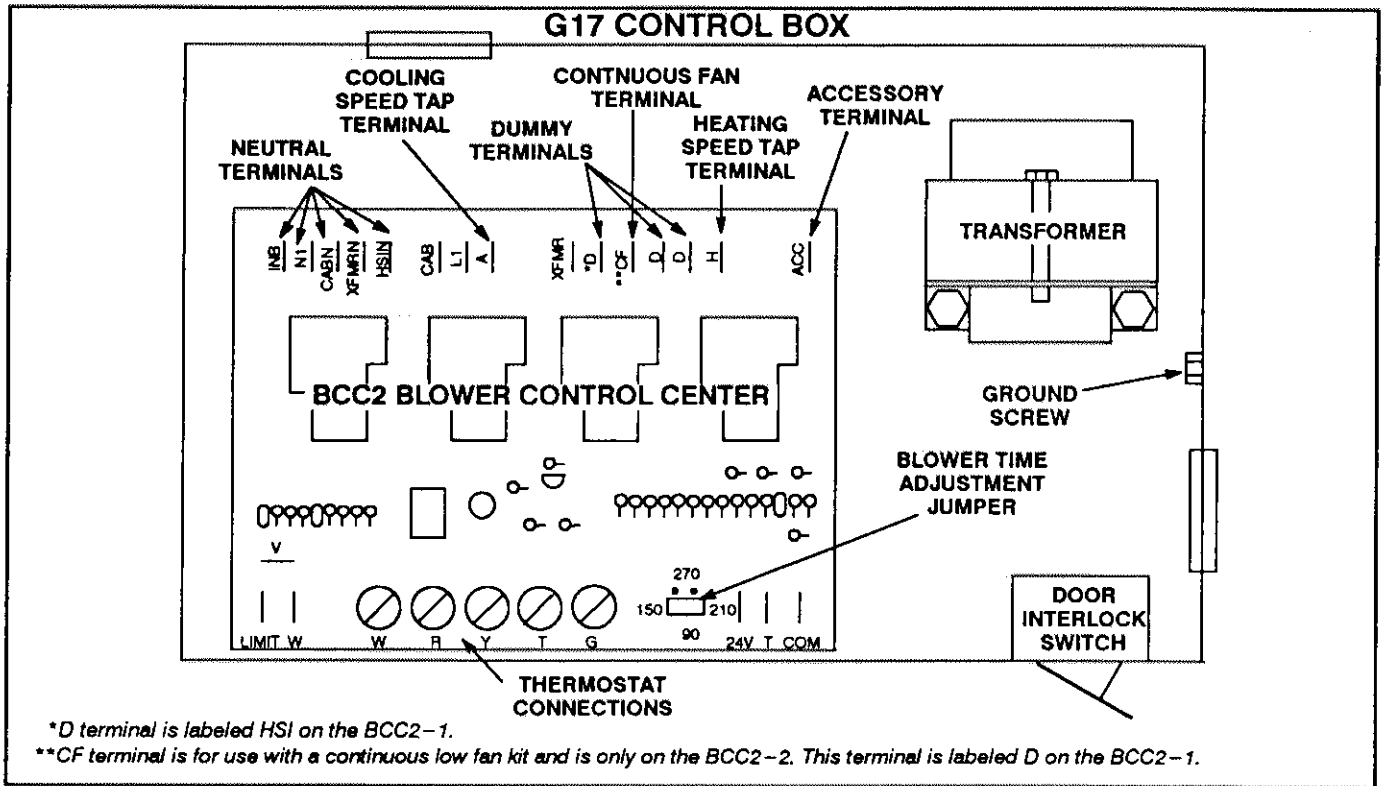


FIGURE 10

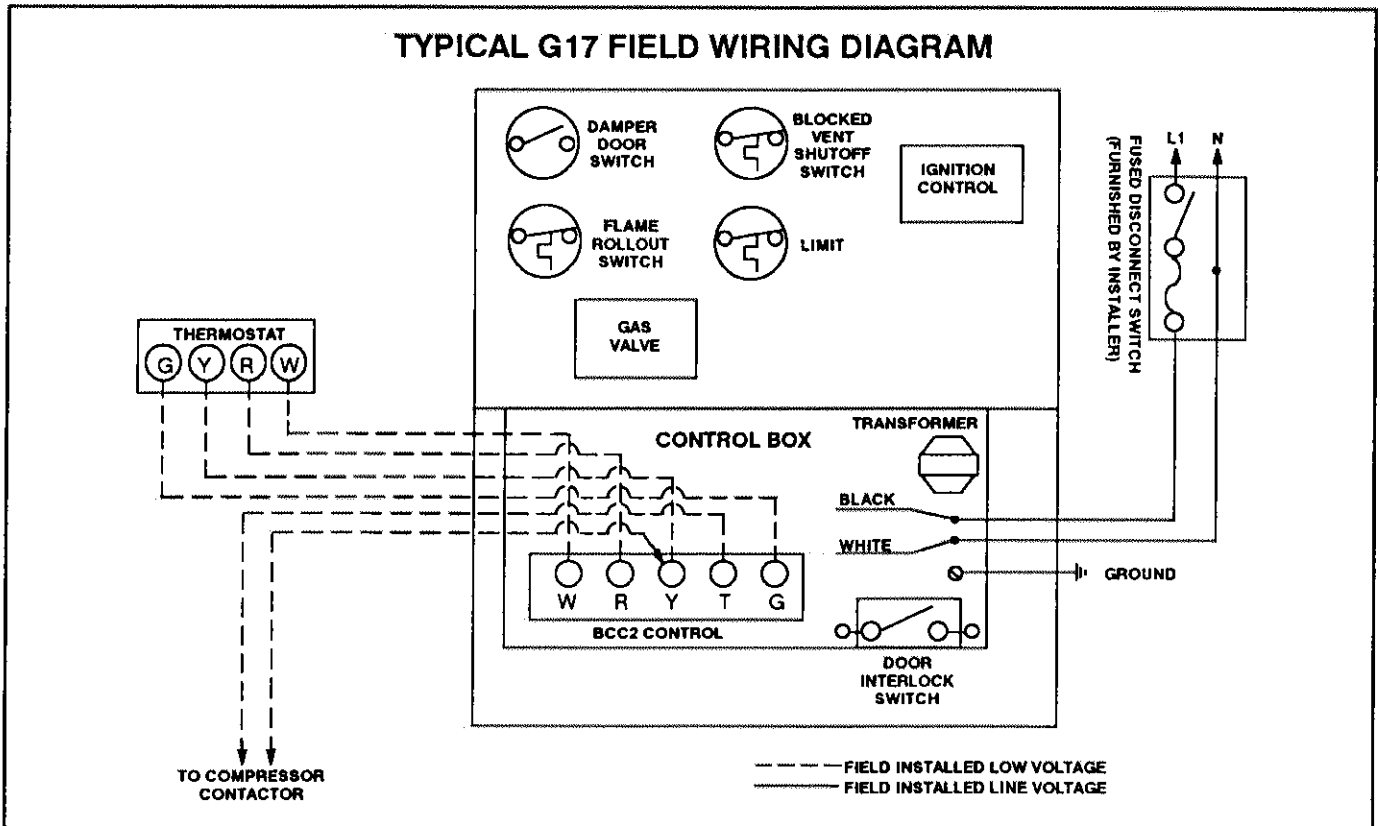


FIGURE 11

VIII—START—UP AND ADJUSTMENTS

A—Start—Up

FOR YOUR SAFETY READ BEFORE LIGHTING

⚠ WARNING

Do not use this furnace if any part has been underwater. Immediately call a qualified service technician to inspect the furnace and to replace any part of the control system and any gas control which has been under water.

⚠ WARNING

If overheating occurs or if gas supply fails to shut off, shut off the manual gas valve to the appliance before shutting off electrical supply.

⚠ CAUTION

Before attempting to perform any service or maintenance, turn the electrical power to unit OFF at disconnect switch.

BEFORE LIGHTING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, do not try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.

To place G17 or G17X furnace into operation:

G17 and G17X units are equipped with an intermittent pilot ignition system. Do not attempt to manually light pilots on these furnaces. Each time thermostat calls for heat, the pilot will be automatically lit. The pilot does not burn when there is no call for heat on units with electronic ignitions.

⚠ WARNING

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Gas Valve Operation (Figure 14 – 16)

- 1— STOP! Read the safety information at the beginning of this section.
- 2— Set thermostat to lowest setting. See figure 13.

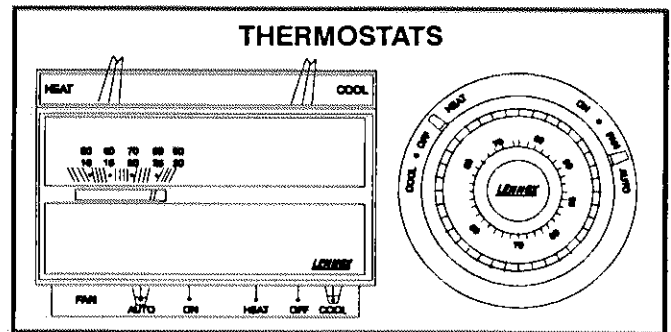


FIGURE 13

- 3— Turn off all electrical power to appliance.
- 4— This appliance is equipped with an ignition device which automatically lights the pilot. Do not try to light the pilot by hand.
- 5— Remove control access panel.
- 6— On Robertshaw 7100D and Honeywell VR8204 gas valves, turn knob on gas valve clockwise to OFF. Units with Robertshaw 7200 gas valve, depress lever and move to OFF position. Do not force. See figures 14 through 16.

ROBERTSHAW 7100DER GAS VALVE

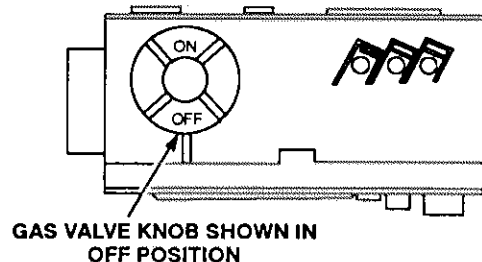


FIGURE 14

HONEYWELL VR8204 SERIES GAS VALVE

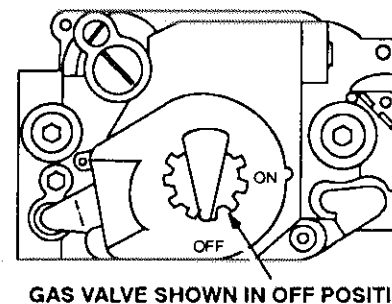


FIGURE 15

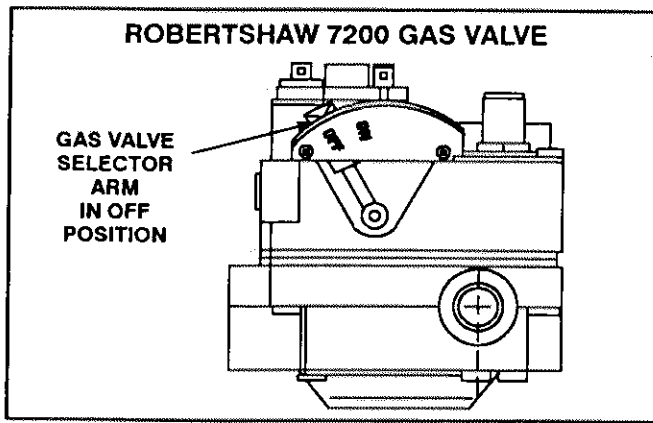


FIGURE 16

- 7- Wait five (5) minutes to clear out any gas. If you then smell gas, **STOP!** Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. If you do not smell gas go to next step.
- 8- On Robertshaw 7100D and Honeywell VR8204 gas valves, turn knob on gas valve counterclockwise to **ON**. Units with Robertshaw 7200 gas valve, depress lever and move to **ON** position. Do not force.
- 9- Replace control access panel.
- 10- Turn on all electrical power to unit.
- 11- Set thermostat to desired setting.
NOTE—When unit is initially started, steps 1 through 11 may need to be repeated to purge air from pilot line.
- 12- If the appliance still will not operate, follow the instructions "To Turn Off Gas To Unit" and call your service technician or gas supplier.

To Turn Off Gas To Unit

- 1- Set thermostat to lowest setting.
- 2- Turn off all electrical power to unit if service is to be performed.
- 3- Remove control access panel.
- 4- On Robertshaw 7100D and Honeywell VR8204 gas valves, turn knob on gas valve clockwise to **OFF**. Units with Robertshaw 7200 gas valve, depress lever and move to **OFF** position. Do not force.
- 5- Replace control access panel.

B-Adjustments

Limit Control

Limit Control—Factory set: No adjustment necessary.

Fan Control

The fan on time of 45 seconds is not adjustable. Fan off time (time that the blower operates after the heat demand has been satisfied) can be adjusted by moving the jumper on the BCC2 blower control center. The unit is shipped with a factory fan off setting of 90 seconds. Fan off time will affect comfort and is adjustable to satisfy individual applications. See figure 17.

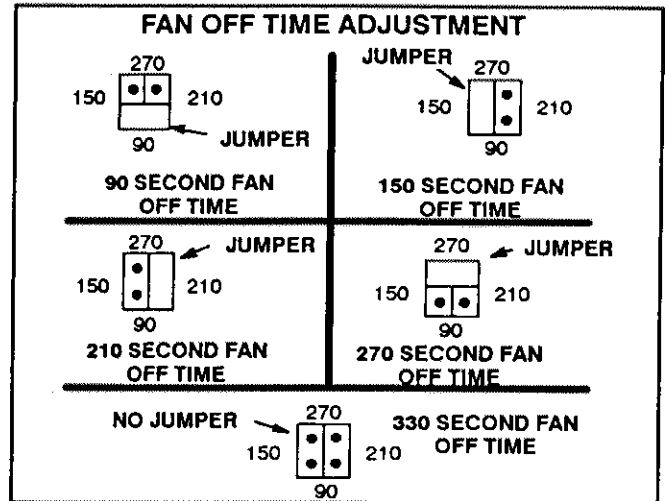


FIGURE 17

Gas Flow

To check for proper gas flow to combustion chamber, determine Btu input from appliance rating plate. Divide this input rating by the Btu per cubic foot of available gas. Result is the required number of cubic ft. per hour. Determine the flow of gas through gas meter for two minutes and multiply by 30 to get the hourly flow of gas to burner.

Gas Pressure

- 1- Check gas line pressure with unit firing at maximum rate. A minimum of 4.5 in. w.c. for natural gas or 10.5 in. w.c. for LP/propane gas should be maintained. See figures 18, 19 and 20 for gas pressure adjustment screw location.
- 2- After line pressure has been checked and adjusted, check regulator pressure. Correct manifold pressure for LP/propane gas is 9.5 in. w.c. A natural gas to LP/propane gas changeover kit is required to convert unit. Refer to the installation instructions supplied with changeover kit for conversion procedure. Correct regulator pressure for natural gas at altitudes below 2000 ft. is 3.5 in. w.c. C.G.A. certified units used in high altitude applications are equipped with modifications that eliminate the need for manifold pressure adjustment, which is 3.5 in. w.c. to obtain proper heat input.

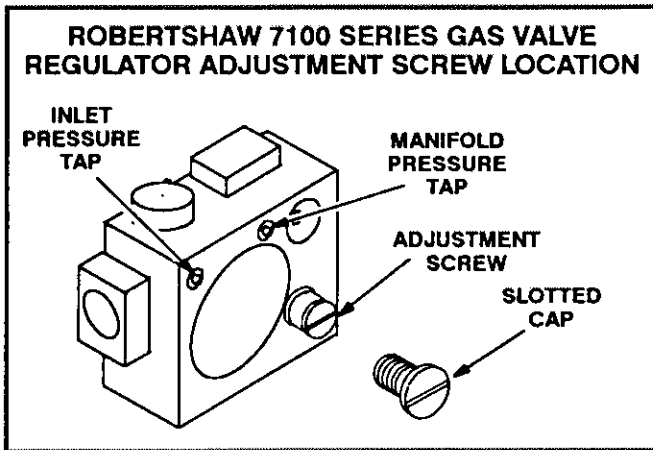


FIGURE 18

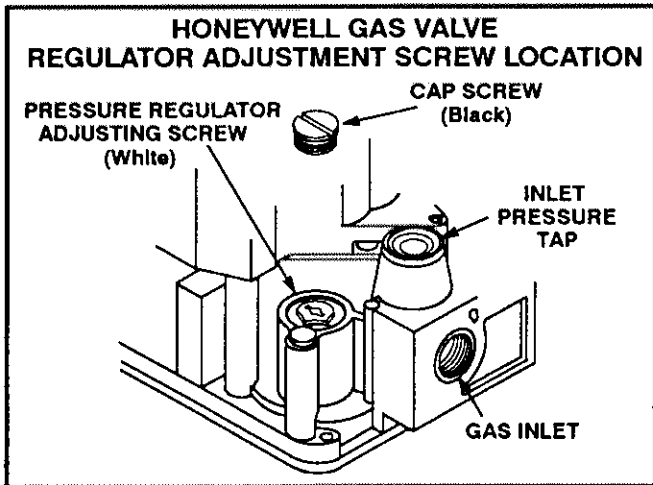


FIGURE 19

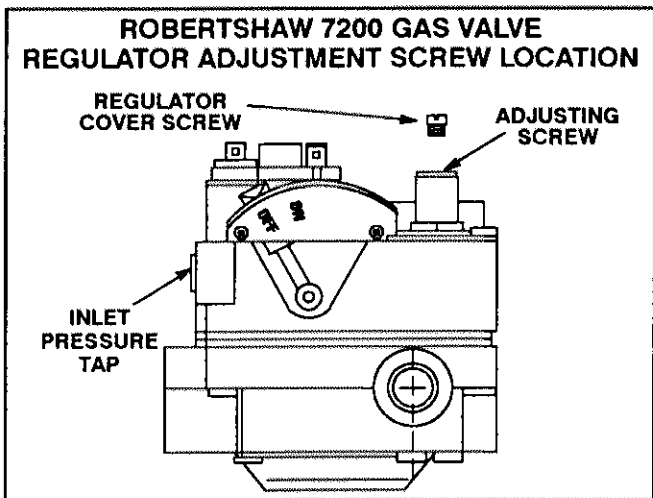


FIGURE 20

Temperature Rise

Check temperature rise and, if necessary, adjust blower speed to maintain temperature rise within range shown on unit rating plate.

Thermostat Adjustment

Set thermostat heat anticipation to .5 amps for all G17 series units.

Blower Speeds

Blower speed selection is accomplished by changing the taps at the harness connector at the blower motor. See figure 21.

Refer to speed selection chart on unit wiring diagram.

NOTE—CFM readings are taken external to unit with a dry evaporator coil and without accessories.

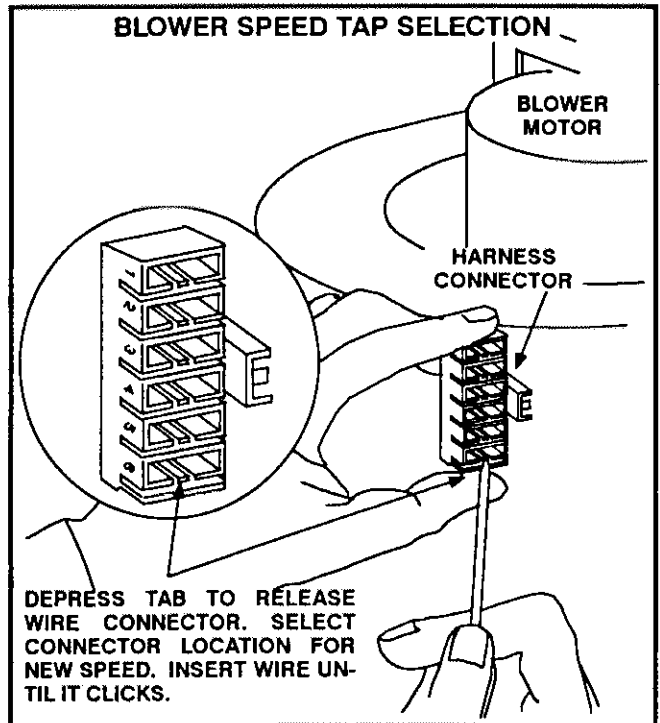


FIGURE 21

Electrical

- 1- Check all wiring for loose connections.
- 2- Check for correct voltage at unit (unit operating).
- 3- Check amp-draw on blower motor.
Motor Nameplate _____ Actual _____

Flue and Chimney

- 1- Check flue pipe, chimney and all connections for tightness and to make sure there is no blockage.
- 2- Check unit for proper draft.

Failure to Operate

If unit fails to operate check the following:

- 1- Is thermostat calling for heat?
- 2- Is main disconnect switch closed?
- 3- Is there a blown fuse?

- 4- Is filter dirty or plugged? Dirty or plugged filters will cause unit to go off on limit control.
- 5- Is gas turned on at meter?
- 6- Is manual main shut-off valve open?
- 7- Is internal manual shut-off valve open?

After items 1 through 7 have been checked and unit still will not start, manually reset vent safety shut-off switch located at the right side of draft hood. If unit operation resumes and then cuts out again, inspect furnace vent system for proper sizing and installation. Also, check for vent blockage and for proper draft. If unit still does not start, reset roll-out switch on burner box. See figure 30. If unit starts and cuts out, check heat section for blockage.

Pilot and Burner Flame

- 1- *Pilot Flame* -- Pilot flame must surround the end of flame sensor for proper operation of pilot safety circuit. See figure 22.
- 2- *Burner Flame* -- Start burner and allow to operate for a few minutes to establish normal burning conditions. Check burner flame by observation. Flame should be predominantly blue in color, strong in appearance and should rise directly from the burner ports in the heat exchanger. Check to see that flame is burning from all continuous ribbon ports and that flame does not impinge on the sides of the heat exchanger.

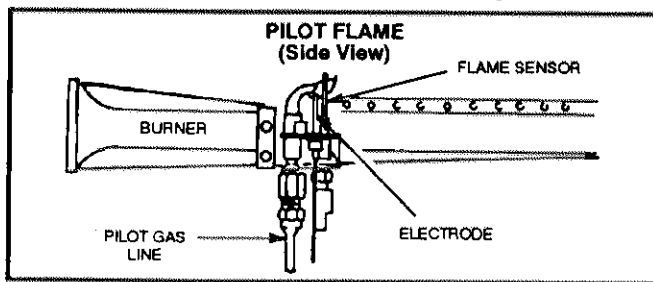


FIGURE 22

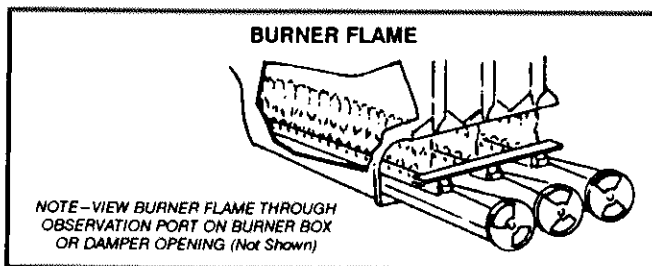


FIGURE 23

CAUTION

Check pilot flame and burner flame periodically to ensure proper operation.

IX-SERVICE

! WARNING

Disconnect power before servicing unit.

At the beginning of each heating season, the system should be checked as follows:

Blower

Check and clean blower wheel for any debris. Blower motor is prelubricated for extended bearing life. No further lubrication is needed.

Filters

G17 and G17X series units are equipped with permanent internal filters which should be inspected monthly and cleaned when necessary to assure proper furnace operation. Table 3 refers to filter sizes. Use the following procedure and figure 24 to clean filter.

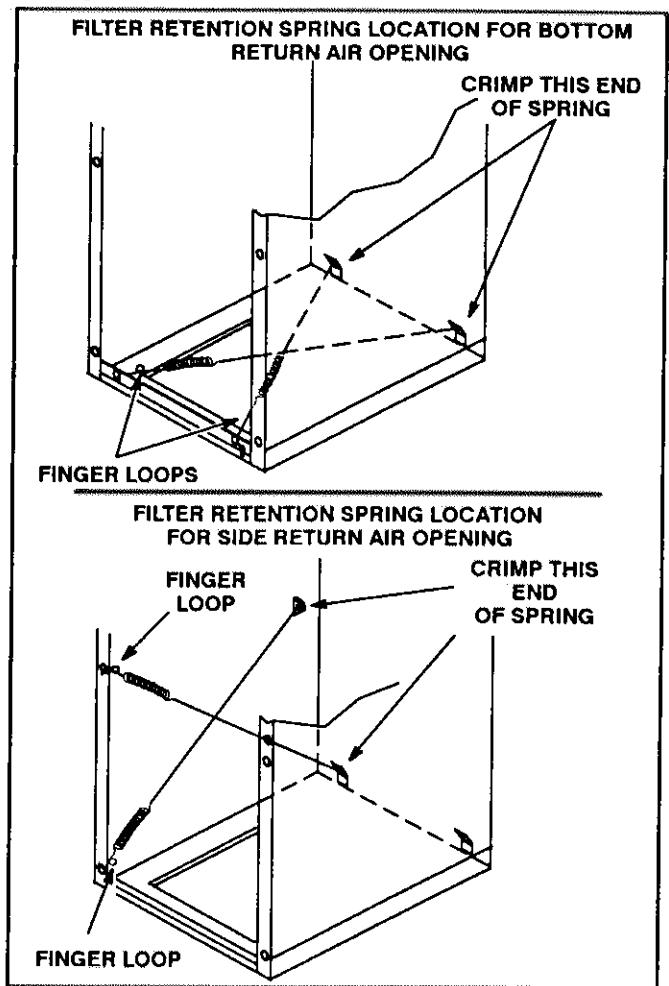


FIGURE 24

- 1- Turn off electric power to furnace.
- 2- Remove blower access panel.

- 3- Disconnect retention springs using finger loops and remove filter.
- 4- Clean filter with cold water. Direct water through filter in the opposite direction of air flow.
- 5- Allow filter to dry.
- 6- Replace filter, reconnect springs, replace blower access panel and restore power to unit.

TABLE 3

| MODEL NO. | FILTER SIZE | |
|-----------------------------------|-------------|---------------|
| | SIDE RETURN | BOTTOM RETURN |
| Q2-50, Q3-75, Q4X-75, Q3/4-100 | 16 X 25 X 1 | 16 X 25 X 1 |
| Q5/6-100, Q5/6-125 | 20 X 25 X 1 | 25 X 26 X 1 |

Flue and Chimney

Check flue pipe, chimney and all connections for tightness and to make sure there is no blockage.

Electrical Check

- 1- Check all wiring for loose connections.
- 2- Check for correct voltage at unit (unit operating).
- 3- Check amp-draw on blower motor.
Motor Nameplate _____ Actual _____

Cleaning Heat Exchanger and Burners

NOTE—Use papers or protective covering in front of furnace while cleaning furnace.

To clean heat exchanger:

- 1- Turn off both electrical and gas power supplies to furnace. Refer to figures 29 and 30 during disassembly and reassembly procedures.
- 2- Remove burner and upper access panel, flue pipe and draft hood.
- 3- Disconnect supply gas piping.
- 4- Remove burner box top by removing four holding screws.
- 5- Remove two screws each from the left and right patch plates. Remove patch plates, damper prove switch cover and damper.
- 6- Remove screws holding gas manifold in place and pull burners from heat exchanger.
- 7- Remove baffles inside top opening of heat exchanger by twisting tabs to align with slots in baffles.
- 8- Insert a 2 ft. (600 mm) steel rod that has a 20 in. (508 mm) length of chain attached to one end into top opening of heat exchanger. See figure 25.

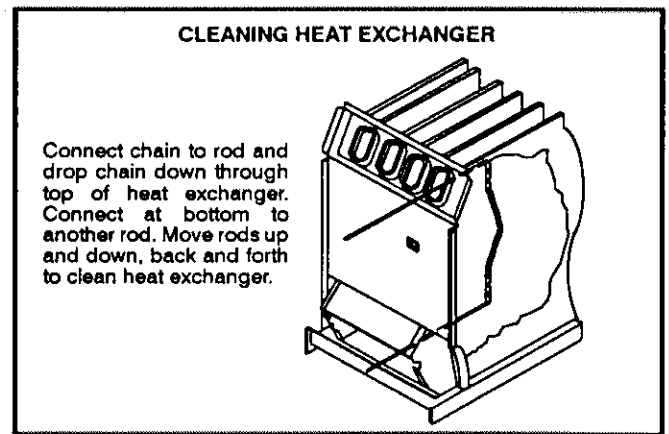


FIGURE 25

- 9- Shake rod to drop chain through the clamshell into burner cavity in bottom of heat exchanger.
- 10- Attach bottom of chain to another 2 ft. (600 mm) rod.
- 11- Push and pull the rods back and forth and up and down with a vigorous motion. The chain will dislodge the soot and scale deposits inside the heat exchanger. Repeat for each clamshell.
- 12- With a shop vacuum or rags, clean out soot and scale deposits from bottom of heat exchanger.

To clean burners:

NOTE—FOR UNITS WITH FLAME RODS, remove two springs and withdraw rods from back of burner. Clean flame rods with wire brush. Continue with items 13 through 15 below and reinstall flame rods and springs.

- 13- Clean top of burner ports with a wire brush.

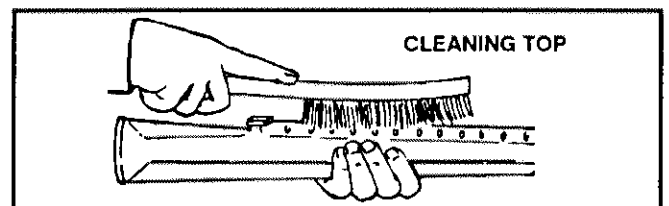


FIGURE 26

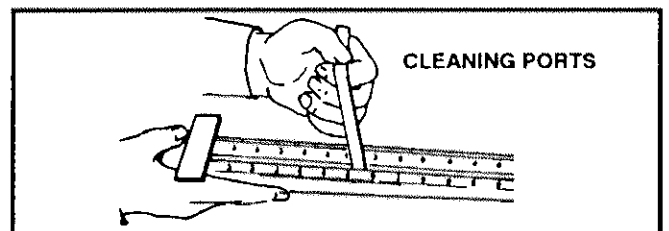


FIGURE 27

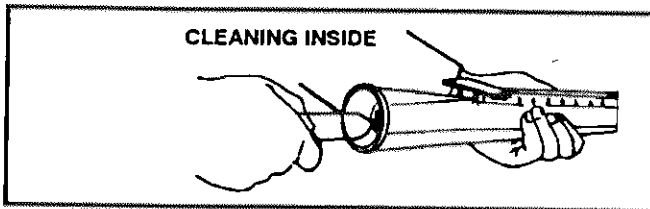


FIGURE 28

- 14—Clean burner ports by inserting a cleaning tool (made from a piece of sheet metal cut to fit the burner ports) and work in and out of each port. See figure 27.
- 15—Clean inside of each burner with a bottle cleaning brush. See figure 28.
- 16—Replace burners making sure to fully engage in rear receiving slot in heat exchanger. Resecure gas manifold and supply piping.
- 17—Reinstall baffles inside top opening of heat exchanger twisting tabs to secure baffles.
- 18—Resecure damper assembly, damper prove switch cover and burner box top. Carefully open damper by hand to ensure that the damper spring closes

damper correctly and that the damper prove switch is engaged when damper is open.

! CAUTION

Use extreme care when opening damper door to prevent permanent damage to the damper motor.

- 19— Before replacing draft hood, flue pipe and access panels, inspect draft hood gasket. Replace gasket if necessary.
- 20— Carefully check all piping connections (factory and field) for gas leaks. Use a leak detecting solution or other preferred means.

! CAUTION

Some soaps used for leak detection are corrosive to certain metals. Carefully rinse piping thoroughly after leak test has been completed. Do not use matches, candles, flame or other sources of ignition to check for gas leaks.

- 21— Turn on gas and electrical supply.

X—REPAIR PARTS LIST

The following repair parts are available through independent Lennox dealers. When ordering parts, include the complete furnace model number listed on the A.G.A. or C.G.A. rating plate -- Example: G17Q5/6-125-1.

CABINET PARTS

- Upper access panel
- Blower panel
- Top strip
- Cabinet cap

CONTROL PANEL PARTS

- Transformer
- Blower Control Center (BCC2)

BLOWER PARTS

- Blower wheel
- Motor
- Motor mounting frame
- Blower housing cut-off plate
- Filter retention springs

HEATING PARTS

- | | | | |
|----------------------|------------------|------------------------------|---------------|
| Heat exchanger | Gas manifold | Pilot/electrode assembly | Damper switch |
| Draft hood | Gas valve | Limit control | Couplings |
| Main burners | Ignition control | Flame roll-out switch | Damper spring |
| Main burner orifices | Ignition cable | Blocked vent shut-off switch | 9 pin plug |
| Pilot burner | Igniter | Damper motor | Grommets |

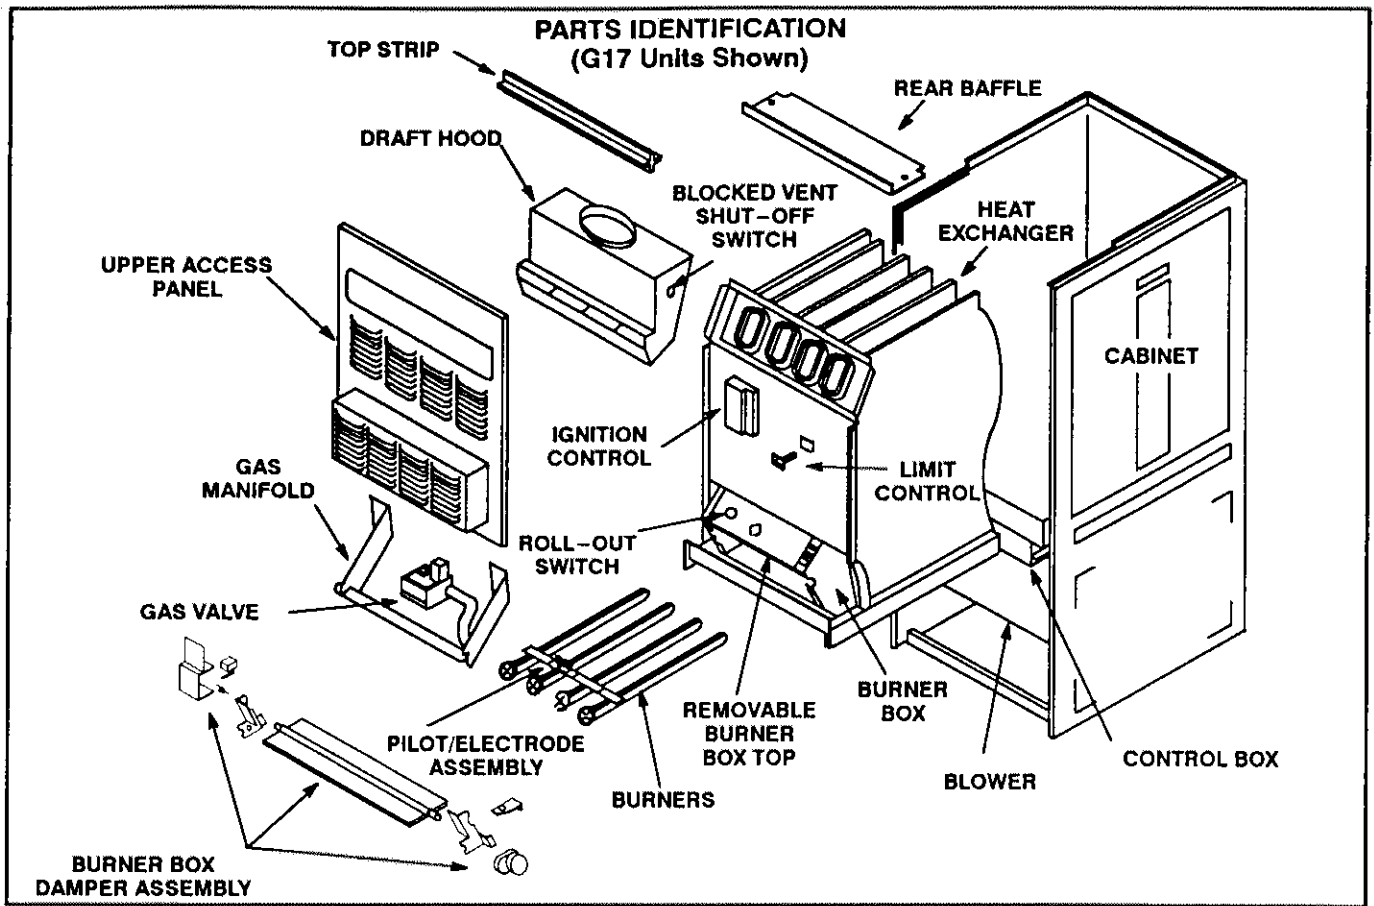


FIGURE 29

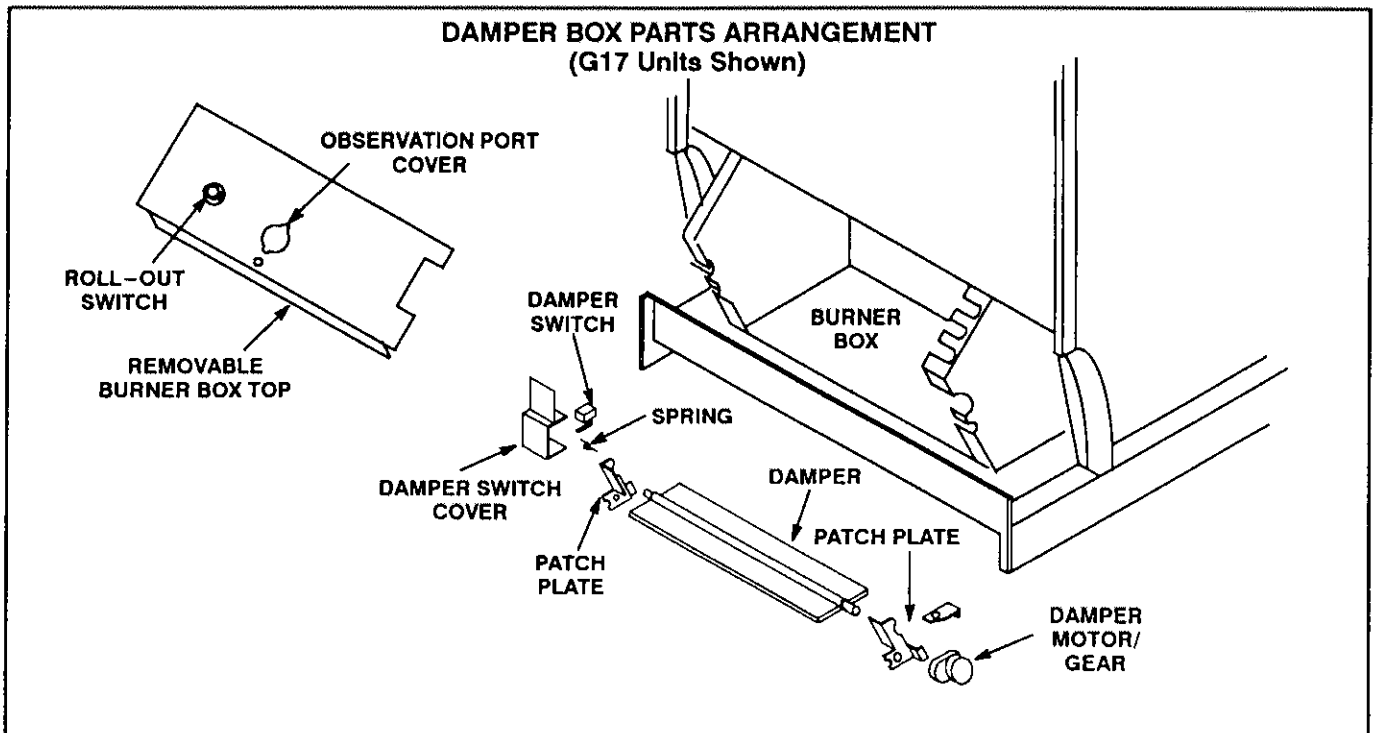


FIGURE 30

BCC2 TROUBLESHOOTING FLOWCHART

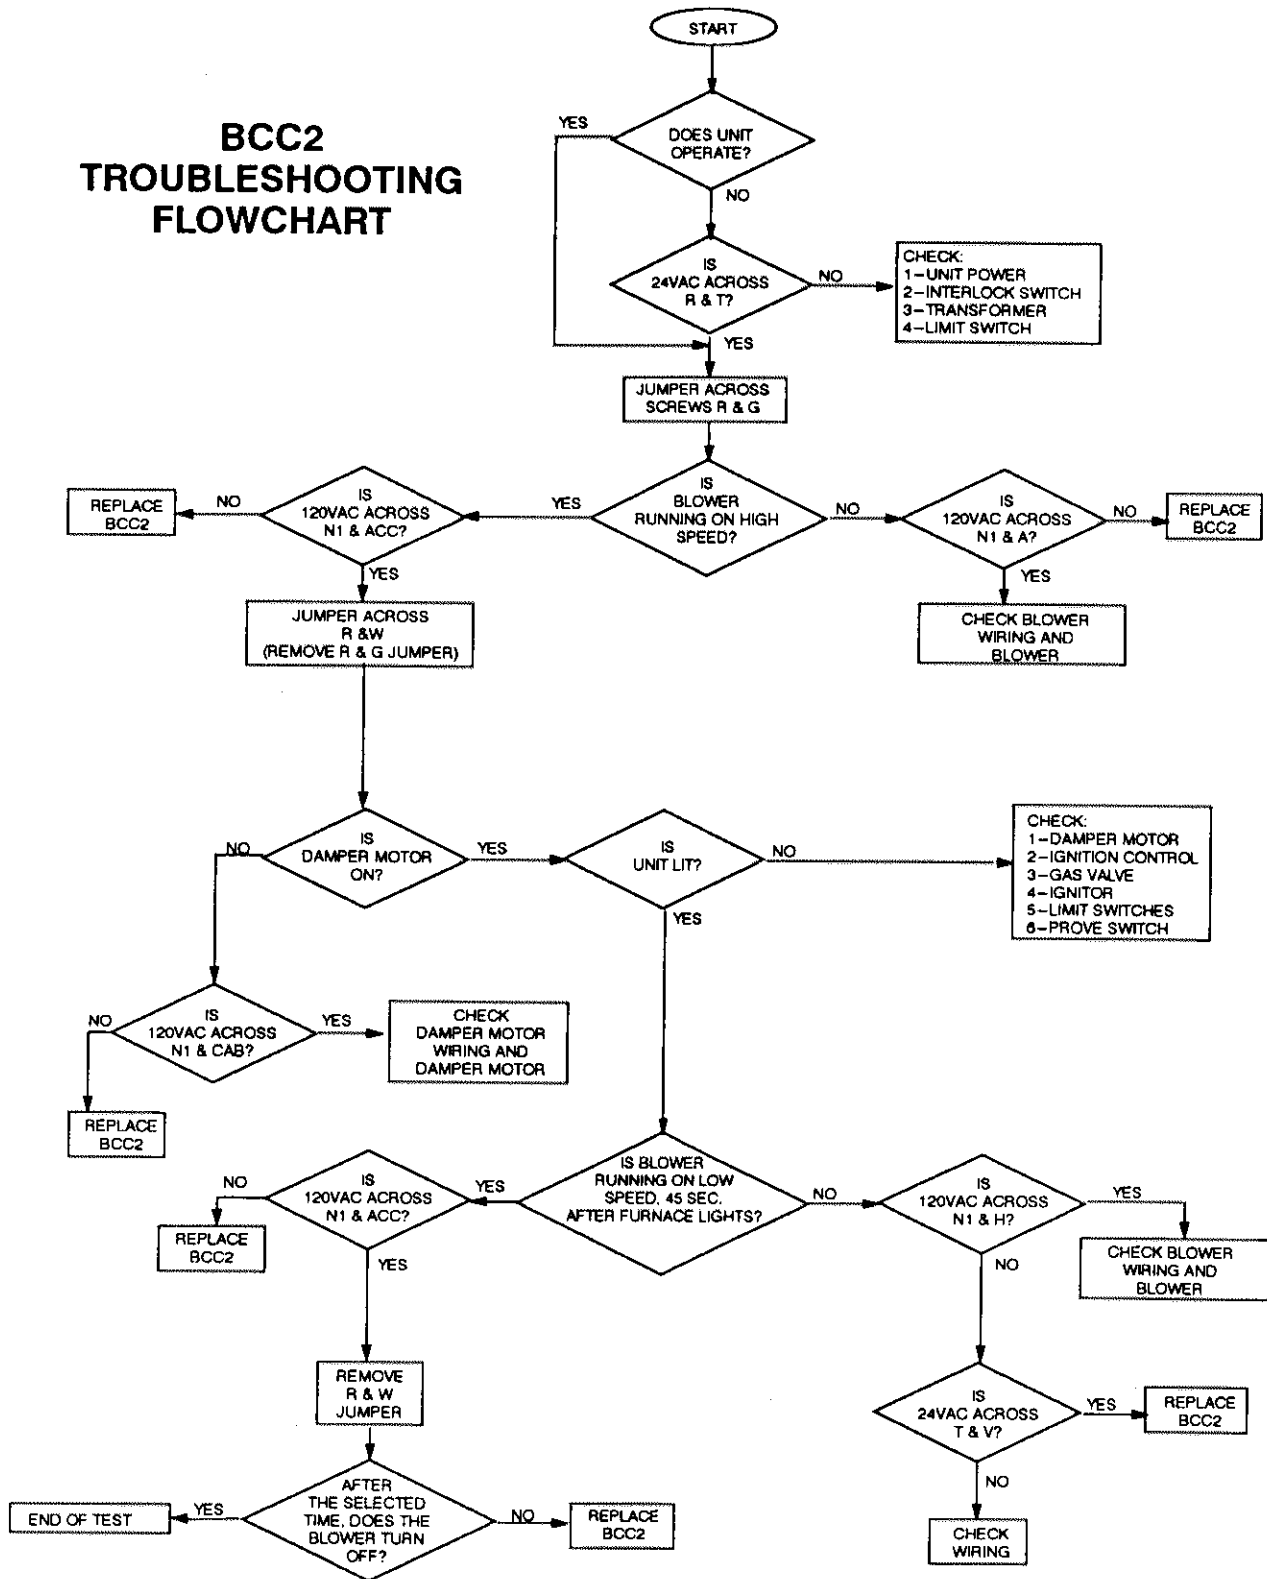


FIGURE 31